

the CROWN7 battery will discontinue working for 10 seconds, to prevent the CROWN7 CARTOMIZER Cartridge from over-heating. CROWN7 also offers an auto charger for your convenience, which can be purchased at www.CROWN7.com.

It is also possible if extremely high pressure is applied to the CROWN7 CARTOMIZER cartridge by biting or other means to the outside of the CROWN7 CARTOMIZER cartridge, for the cartridge lid to pop out and cause a potential choking hazard.



MANUAL

**Step-by-Step Guide to
Getting Started**

Step 1: Review components of the CROWN7 Electronic Cigarette
The CROWN7 CARTOMIZER electronic cigarette is comprised of the CARTOMIZER cartridge (inhaler, liquid container and vaporizer are built as one piece), battery and indicator light.

Step 2: Charging the Batteries
The first step to using the CROWN7 electronic cigarette is charging the special rechargeable lithium batteries. Insert a battery component in the charger, turning clockwise to screw in. Plug the charger with cord into a 100V 240V outlet, or when available use the USB plug. The initial charge can take 2.5 to 3 hours to fully charge. When the LED on the USB cord turns from red (charging) to green (fully charged), the battery is ready for use.

Step 3: Connect Battery to CARTOMIZER Cartridge
Once the battery component is fully charged, unscrew counterclockwise (turn to the left) from the charger and

screw onto the front of the CARTOMIZER Cartridge (turn to the right).

Step 4: Preparing the Crown7 CARTOMIZER Cartridges

The CARTOMIZER Cartridge is the consumable product combining a vaporizer and cartridge into one unit. First, remove the silicone plugs from each end of the CARTOMIZER cartridge and dispose of properly, while keeping the CARTOMIZER cartridge out of reach of children and pets.



Crown7 CARTOMIZER Cartridge Care and Disposal

Your CROWN7 CARTOMIZER cartridges should remain in the cellophane bag until you intend to use them. Do not leave unsealed cartridges out in the open, as the concentrated ingredients may dry out. Keep cartridges out of the reach of children and pets. Used or unused open cartridges contain nicotine may be poisonous. If ingested, get medical help immediately or contact your local Poison Control Center immediately. In the US call 800-222-1222.

Crown7 CARTOMIZER Cartridge Care and Disposal

Your CROWN7 CARTOMIZER cartridges should remain in the cellophane bag until you intend to use them. Do not leave unsealed cartridges out in the open, as the concentrated ingredients may dry out. Keep cartridges out of the reach of children and pets. Used or unused open cartridges contain nicotine may be poisonous. If ingested, get medical help immediately or contact your local Poison Control Center immediately. In the US call 800-222-1222.

Is CROWN7 a Smoking Cessation Product?

CROWN7 has never been tested or proven to be a smoking cessation device and is not sold or marketed as such.

Monitoring Nicotine Consumption

The electronic circuit will start and the indicator light on the tip of the CROWN7 electronic cigarette will glow each time you draw. When you stop drawing, it will automatically terminate the vaporizer, and the device will go into a standby mode. There is no 'on and off' switch on the CROWN7 electronic cigarette.

Can I Smoke CROWN7 Anywhere?

Since CROWN7 is non-flammable, contains no tobacco and emits no second hand smoke, depending on your location, its use may not be prohibited by statutes or ordinances. CROWN7 customers have used the product without issue or complaint in restaurants, workplaces, and many other locations. Still, do not be surprised when people ask you about using CROWN7. After all, to the casual observer, using CROWN7 creates curiosity. Customers report that simply explaining to others how CROWN7 works usually creates acceptance.

Vapor Mist

An CROWN7 electronic cigarette emits a virtually odorless mist that evaporates into the air within seconds. CROWN7 leaves no visual residue in the air, whereas traditional smoking can leave an unsightly cloud known to irritate eyes and bother people's senses. CROWN7 Cartridge Longevity CROWN7 CARTOMIZER cartridge will last approximately ±300 draws. Results will vary depending on the intensity of a person's average inhalation. Do not bite down on the CROWN7 CARTOMIZER cartridge, or the CROWN7 CARTOMIZER cartridge may be damaged and stop functioning.

CROWN7 Electronic Cigarette Cartridges
CROWN7 CARTOMIZER cartridges contain 4 major ingredients: water, nicotine, flavoring and propylene glycol. CARTOMIZER cartridges are available with the following percentage of nicotine by volume: 1.8% (high), 1.2% (light), 0.60% (ultra-light) and 0.0% (no nicotine). Visit www.CROWN7.com for a complete selection of CROWN7 refill cartridges. Replace CROWN7 CARTOMIZER cartridges with a new CROWN7 CARTOMIZER cartridge when the vapor volume is reduced below a satisfactory level.

Battery Charge Longevity

The CROWN7 battery will last approximately 2 days before re-charging is required, depending upon the intensity of usage. Longevity is impacted by the intensity of the puffs and will vary by individual. If customer consistently uses the CROWN7 battery, when the battery power is under 3.3V or the battery is almost fully discharged, the battery LED will flash 8 times and repeat 3 times. The CROWN7 battery will then TURN OFF and enter the "CROWN7 battery protection mode" or shut completely off until the battery is recharged. If customer vaporizes continuously for more than 7 seconds,